

UserManual

About Energy KSG Series battery

KSG Series battery can be installed in Parallel mode; more attention should be paid for the DIP and address selection following with part 0.

About this manual

This manual is intended for the KSG Series battery, but the hybrid inverter and any other equipment is not included. The Energy hotline is available if you want to get additional information.

Declaration

We declare that this KSG Series is compliance with the essential requirements.

Contents

About Energy KSG Series battery.....	
About this manual.....	
Declaration.....	
1 Safety introduction	
1.1 Important Safety Instructions	
1.2 Warnings in this Document	
1.3 Battery handling guide	
1.4 Response to emergency situations	
1.5 Installers	
1.6 Scrap battery	
1.7 Contact information	
2 Product Introduction	
2.1 Technical data	
3 Guidance for disconnection of batteries during shipment	
4 Installation Prerequisites	
4.1 Installation location	
4.2 Installation requirements	
4.3 Installation process	
4.4 Installation materials	
4.5 Tools	
4.6 Safety instruments	
4.7 Network cable	
4.8 Storage	
5. Battery Installation	
5.1 Checks before installation	
5.2 Installation the battery	
5.2.1 Ground installation	
5.2.2 Address select of Master and Slave battery(ies) connection	
6 Commissioning	
6.1 Commissioning battery	
6.2 Shutting down battery	

1. Safety introduction

1.1 Important Safety Instructions

This manual contains important instructions for:

KSG Series energy storage product
and this manual must be followed when installing and using this product.

The product is designed and tested in accordance with international safety requirements IEC 60364, but as with all electrical and electronic equipment, certain precautions must be observed when installing and/or operating the product. To reduce the risk of personal injury and ensure the safe installation and operation of the product, you must carefully read and follow all instructions, cautions and warnings in this manual.

1.2 Warnings in this Document

A warning describes a hazard to equipment or personnel. It calls attention to a procedure or practice, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the equipment and/or other equipment connected to the equipment or personal injury.

Symbol	Description
	Caution, risk of electric shock
	Heavy enough may cause severe injury
	Keep the battery away from open flame or ignition sources
	Keep the battery away from children
	Do not dispose of the product with household waste
	Recycling
	Read this manual before installation and operation

For safety reasons, installers are responsible for familiarizing themselves with the contents of this manual and all warnings before performing installation.

1.3 Battery handling guide

- Use the battery pack only as directed.
- If the battery defective, appears cracked, broken or otherwise damaged, or fails to operate, contract the hot line immediately.
- Do not attempt to open, disassemble, repair, tamper with, or modify the battery. The battery pack is not user serviceable.
- To protect the battery and its components from damage when transporting, handle

with care.

- Do not subject it to any strong force.
- Do not insert foreign objects into any part of the battery pack.
- Do not use cleaning solvents to clean the battery.

1.4 Response to emergency situations

The KSG Series is designed with multiple safety strategies to prevent hazards resulting from failures. However, cannot guarantee their absolute safety for uncertain situations.

1.4.1 Leaking batteries

If the battery pack leaks electrolyte, avoid contact with the leaking liquid or gas. Electrolyte is corrosive and contact may cause skin irritation and chemical burns. If one is exposed to the leaked substance, do these actions:

Inhalation: Evacuate the contaminated area, and seek medical attention immediately.

Eyes contact: Rinse eyes with flowing water for 15 minutes, and seek medical attention immediately.

Skin contact: Wash the affected area thoroughly with soap and water, and seek medical attention immediately.

Ingestion: Induce vomiting as soon as possible, and seek medical attention immediately.



1.4.2 Fire

In case of a fire, make sure that an ABC or carbon dioxide extinguisher is nearby and does not use water to extinguish the fire.

WARNING

The battery pack may catch fire when heated above 130°C.

If a fire breaks out where the battery is installed, do these actions:

1. Extinguish the fire before the battery catches fire.
2. If the battery has caught fire, do not try to extinguish the fire. Evacuate people immediately.

WARNING

If the battery catches fire, it will produce poisonous gases. Do not approach

1.4.3 Wet battery

If the battery is wet or submerged in water, do not try to access it. Contact hot line or your distributor for technical assistance.

1.4.4 Damaged battery

If the battery damaged, please contract hot line or your distributor for help as soon as possible, because damaged battery is dangerous and must be handled with extreme caution. Damaged battery is not suit for use and may pose a danger to people or property. If the battery seems to be damaged, return it to or your distributor.

CAUTION

Damaged battery might export electrolyte or flammable gas, so contact for advice and information immediately we will deal with it

within 48h.

1.5 Installers

battery KSG Series is suggested installing by skilled worker or electrician. A skilled worker is defined as a people who had been trained and qualified electrician or had all of the following skills and experience:

- Knowledge of the functional principles and operation of on-grid Energy Storage systems.
- Knowledge of the dangers and risks associated with installing and using electrical devices and acceptable mitigation methods.
- Knowledge of the installation of electrical devices
- Knowledge of and adherence to this manual and all safety precautions and best practices.

1.6 Scrap battery

For scrap battery(-ies), please treat with local laws or regulations to recycle or scrap.

2. Product Introduction

2.1 Technical data

Model	KS-G5	KS-G10
Total Energy*	48V 100Ah, 4.8KWh	48V 200Ah, 9.6KWh
Usable Energy(DC)*	4.32kWh (90% DOD)	8.64Wh(90%DOD)
Nominal Charge/Discharge Power	2.4kW	4.8kW
Peak Power	9.6kW for 3 seconds	
Max Constant Current	100A	
Voltage	42~54.75Vd.c	
Nominal Voltage	48Vd.c	
Nominal Current	50A	100A
Short circuit current	3100A	
Operating Temperature	Charge	From 0~50°C
	Discharge	From -10~55°C
Dimension(L*W*H)	442*550*133 mm	442*580*232mm
Net Weight	42kg	85kg
Gross Weight	44kg	88kg
Humidity	< 60% (No Condensed Water)	
Installation	Wall Mounting/ Ground Installation	
IP rating	IP 21	
Max. Number ofParallel	15	
Warranty	5 years	
Communication	CAN/ RS485	
Battery Protection	Over-current/Over-voltage/Short circuit/ Under-voltage/Over temperature	
Transportation	UN 38.3/MSDS	

Testing conditions based on temperature 25°C at the beginning of life.

*Total Energy/Usable Energy measured under specific conditions from IEC 62619

3. Guidance for disconnection of batteries during shipment

- 3.1 Cartons that have been crushed, punctured, or torn in such a way that contents are revealed shall be set aside in an isolated area and inspected by a skilled person. If the package is deemed to be not shippable, the contents shall be promptly collected, segregated, and either the consignor or consignee contacted.
- 3.2 The DC circuit of KSG Series has been disconnected before outgoing.
- 3.3 A precautionary label had been affixed to the shipping carton to alert individuals as to the battery within the package have been disconnected; otherwise, the battery should not be transported.
- 3.4 We have conducted comprehensive tests to ensure the equipment they distribute around the world is safe for shipping transport. These products shall be handled with care and immediately inspected if visibly damaged. If the cartoon visibly damaged, please contract with hot line to confirm whether the battery could be used safely or not.



4. Installation Prerequisites

4.1 Installation location

Make sure that the installation location meets the following conditions:

- The building is designed to withstand earthquakes, and the floor is flat and level.
- Far away from the sea to avoid salt water and humidity.
- The installed location should not be access by pet and children.
- No flammable or explosive materials nearby, at least 2.5m far away from combustible.
- Minimal dust and dirt in the area.
- No corrosive gases present, including ammonia and acid vapor.

The battery optimal operate temperature is 15°C to 30°C. Frequent exposure to severe operating condition would exacerbate the performance and lifetime of the battery.


4.2 Installation requirements

For safety used of battery, please notice following notes when install:

- The installation shall be in a restricted access location/ room or in a cabinet where provides a barriers for the battery terminal.
- The maximum number of battery shall be not over 8 PCS.
- DVC class specification: DVC-C for battery terminal, DVC-A2 for all communication terminals.

4.3 Installation process

The battery should be installed according to the following flow chart.

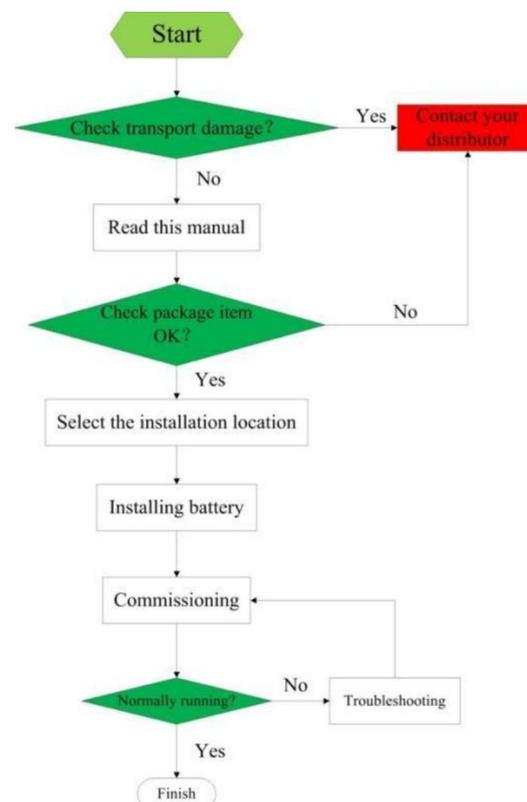

4.4 Installation materials

Following installation materials should be prepared by installers.

- Power cable
- Data cable
- Earth cable
- Ground wire
- Bipolar external isolator, when two or more battery systems in parallel, each of them shall have a bipolar isolator. Meanwhile, the isolator shall have ability to break the full load current.

NOTICE

Make sure that the cross-sectional area of charging cables is 25 to 35 mm².

NOTICE

A breaker between battery and inverter was recommended to install, and the breaker's min. current should be over 150A or following with local regulations.

4.5 Tools


To install the battery pack, those following tools are probably required:




Phillips screwdriver



Torque wrench

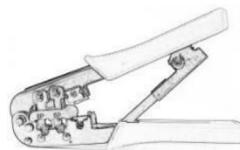

Cable crimper

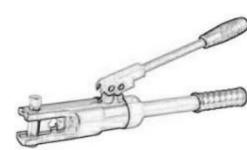

Wire clamp



Voltmeter



Tape measure



Drill



Flat-head screwdriver


In order to protect operator and installer's safety, please select and use suitable tools and measuring instruments that are certified for precision and accuracy.

4.6 Safety instruments

When dealing with the battery, following safety gears should be equipped. Installers must meet the relevant requirements of IEC 60364 or the domestic legislation and other relevant international standards.



Insulated glove

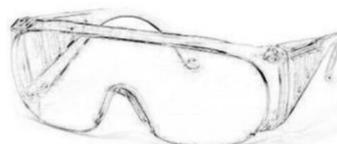


Safety goggles



Safety shoes

4.7 Network cable

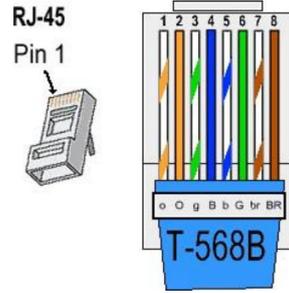

If needed, the network cable should be made like that diagram. But the cable should be made following the definition on battery side. If available, use a LAN cable tester to check whether the cable is faulty.

Definition of CAN communication (default Baud rate 500k)

Pin order	Definition
1, 2, 7, 8	Reserved
4	CANH
5	CANL
3, 6	GND

Definition of RS-485 communication (default Baud rate 19200)


Pin order	Definition
1, 8	RS485-B
2, 7	RS485-A
3, 6	GND
4, 5	Reserved

4.8 Storage

If the battery is not to be installed immediately, or removed from operation and needs to be stored for a long period, please choose an appropriate location to store it. Instructions for storage are:

- Do not stack more than 8 battery boxes.
- The temperature of battery stored recommended in the range of -20°C to 25°C.
- Do not expose to water

The battery box should be upright as shown in the following figure and not stacked upside down when storing the battery box.

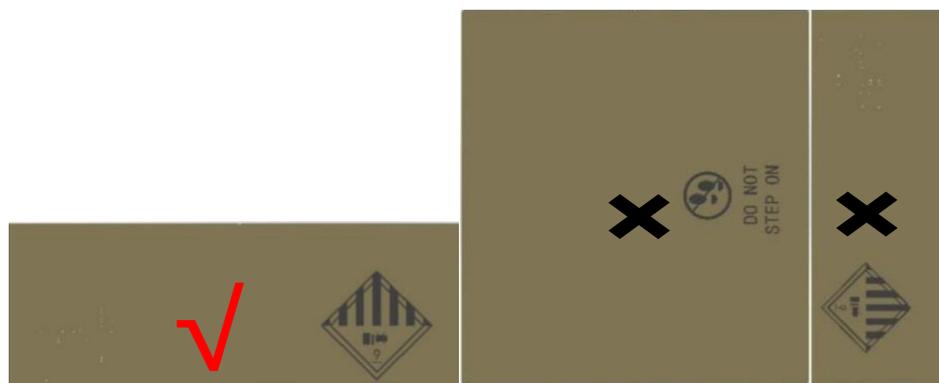

If the battery needs to be stored over 3 months, the DC circuit of battery suggests to be disconnecting. Otherwise, the battery would discharge at a minimum rate and capacity degrades depended on storage time, the battery self-consumption less than 5w. And, if the battery stored over 6 months, it is suggested to connect the battery with inverter and commission the system.

5. Battery Installation

5.1 Checks before installation

There are a few things to check before installing the battery to ensure that it has no defects.

Check item 1: Check the battery voltage.

WARNING

If this checking process is executed for any reason after the battery is fully installed, make sure that the inverter is turned off or break the connection between battery and inverter while checking the battery.

Press and hold the panel button and then release it, measure the voltage at the terminal interface with a voltmeter. If the voltage is lower than 48 V, do not use the batter.


5.2 Installation the battery

NOTICE

If the battery is installed above the floor or on a platform, make sure that the wall or platform is capable of supporting the battery's weight.

5.2.1 Ground installation

KSG Series could be installed on floor, the installation like the diagram

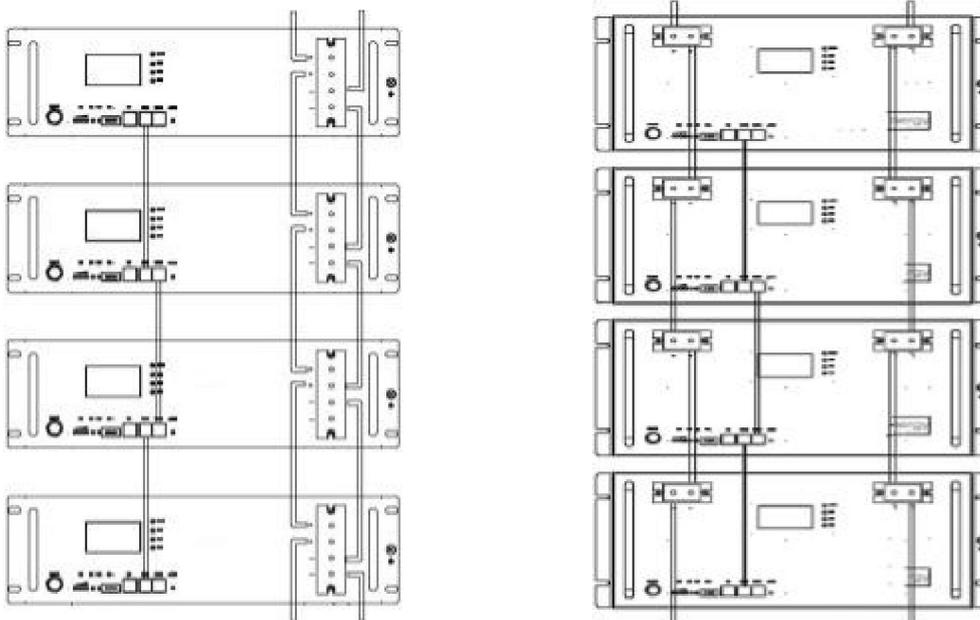

5.2.2 Address select of Master and Slave battery(ies) connection

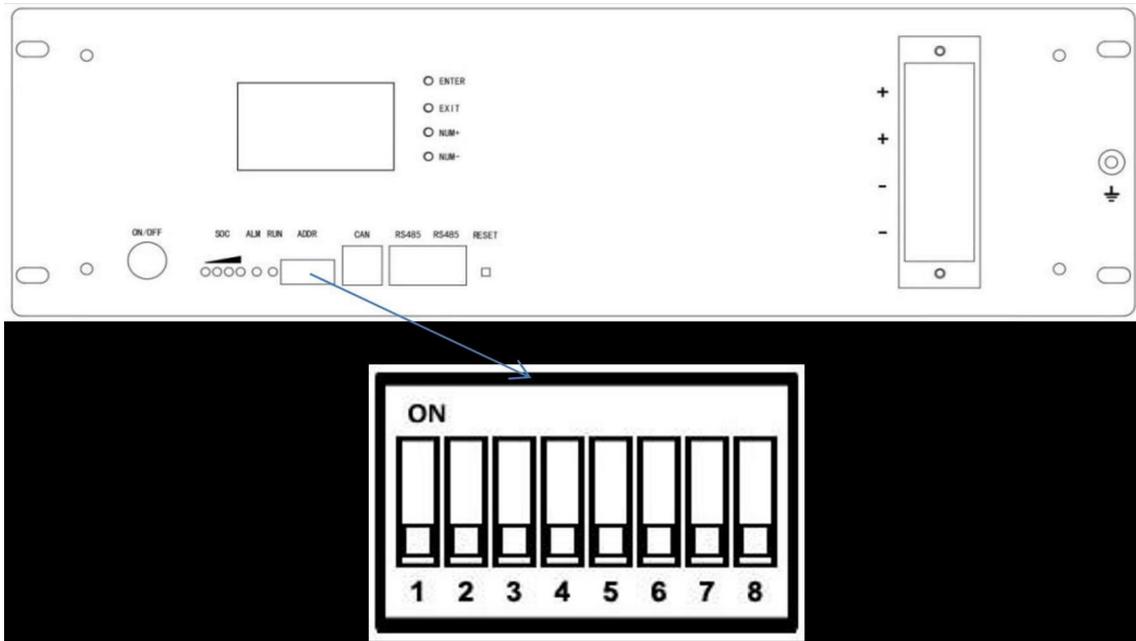


Table 5-1 DIP switch set of Subordinary battery(-es)

Sub battery No.	DIP switch set				Introduction
	#1	#2	#3	#4	
1	ON	OFF	OFF	OFF	Pack 1
2	OFF	ON	OFF	OFF	Pack 2
3	ON	ON	OFF	OFF	Pack 3
4	OFF	OFF	ON	OFF	Pack 4
5	ON	OFF	ON	OFF	Pack 5
6	OFF	ON	ON	OFF	Pack 6
7	ON	ON	ON	OFF	Pack 7
8	OFF	OFF	OFF	ON	Pack 8
9	ON	OFF	OFF	ON	Pack 9
10	OFF	ON	OFF	ON	Pack 10
11	ON	ON	OFF	ON	Pack 11
12	OFF	OFF	ON	ON	Pack 12
13	ON	OFF	ON	ON	Pack 13
14	OFF	ON	ON	ON	Pack 14
15	ON	ON	ON	ON	Pack 15

Table 5-2 DIP switch set of Primary battery

Parallel Connection No.	DIP switch set				Introduction
	#5	#6	#7	#8	
2	ON	OFF	OFF	OFF	2 batteries
3	OFF	ON	OFF	OFF	3 batteries
4	ON	ON	OFF	OFF	4 batteries
5	OFF	OFF	ON	OFF	5 batteries

6	ON	OFF	ON	OFF	6 batteries
7	OFF	ON	ON	OFF	7 batteries
8	ON	ON	ON	OFF	8 batteries
9	OFF	OFF	OFF	ON	9 batteries
10	ON	OFF	OFF	ON	10 batteries
11	OFF	ON	OFF	ON	11 batteries
12	ON	ON	OFF	ON	12 batteries
13	OFF	OFF	ON	ON	13 batteries
14	ON	OFF	ON	ON	14 batteries
15	OFF	ON	ON	ON	15 batteries

NOTICE

Before two or more batteries installed in parallel, please check the voltage of each battery and make sure the voltage different less than 2.0V.

NOTICE

But, if more than 4 batteries KSG5Plus connected in parallel mode, the Primary and last Sub battery's power terminal interfaces all suggested to be used and linked with Inverter.

6 Commissioning

6.1 Commissioning battery

If there is only one battery installed, use the following steps to put it in operation:

1. Press the panel button, after the indicator lights on, release the panel button.
2. Make sure that the Run light is on. If it stays off, do not use the battery and contact your distributor.
3. Turn the inverter on, and wait for the start-up sequence to complete fully.

When there are two or more batteries connected with parallel mode, after the charging cable and the data cable has been connected correctly, follow these steps to put them in operation:

1. Check battery voltage level is above 48V
 - a) If battery voltage is under 45V contact your distributor or after service hot line for help.
2. Release the panel button, after few seconds the indicator lights off.
3. Before Commission the system, please pay attention on following tips:
 - a) For all batteries, make sure that the Run light is on.
 - b) Make sure the maximum voltage different between batteries less than 1.5V.
 - c) If not, the installer should balance the battery voltage and then parallel connect batteries together.
 - d) Set the DIP switches like **Table 5-1** and **Table 5-2**.
4. Turn the inverter on, and wait for the start-up sequence to complete fully.

6.2 Shutting down battery

Shut down the battery only when the battery under standby status.

1. Release the Panel Button, after few seconds the battery will turn off itself.
2. Make sure that every light on the battery is off.